

# Encore PVC

Encore is a soft, durable and low-maintenance PVC fabric. Encore is treated with EZYCLEAN® protective finish to help guard against stains and disinfection with a bleach solution making it an ideal choice for use in high-traffic areas such as hospitals and educational facilities.

## SPECIFICATIONS

<b>Composition</b>	PVC with polyester backing
<b>Origin</b>	Made in the PRC
<b>Gauge</b>	1mm
<b>Weight</b>	615 g/m <sup>2</sup>
<b>EZYCLEAN®</b>	Protective surface finish
<b>Restricted use of hazardous substances</b>	No phthalates, formaldehyde, lead, mercury or chromium in the manufacturing process
<b>Abrasion resistance</b>	Martindale 100,000+ rubs (no significant wear) AS 2001.2.25
<b>Flammability</b>	Spread of flame: 0 Smoke developed: 5 AS 1530.3 IMO Standard A.652 (16) FAS 25.853 Fire test certificate available upon request
<b>Colour fastness</b>	No change of colour rating 4-5 Bleach tested AS 2001.4.11
<b>Antimicrobial and antibacterial</b>	Sanitised treatment to inhibit the growth of bacteria, mould and mildew

## CLEANING INSTRUCTIONS

### Regular Cleaning and Maintenance

Use Athlegen's Upholstery Cleaner or completely neutral, unscented laundry soap. Rinse with fresh water and wipe dry with a clean lint-free soft cloth. A soft natural bristle brush will help remove grime and cleaning residue build-up embedded in the embossed surface grain.

### Healthcare

Clean the soiled area with a mild bleach solution (10%), an alcohol-based solution (50-70%) or isopropyl alcohol (70%) wipes.

### Disinfection

The most gentle disinfectant for treatment table upholstery is household bleach - active ingredient sodium hypochlorite with a concentration of at least 1000ppm/10%. Leave on for 10 minutes to disinfect. Always follow the manufacturer's instructions.

### Difficult Stains

To remove difficult stains, clean with an alcohol-based solution such as isopropyl alcohol (50%) or isopropyl alcohol (70%) wipes.

NOTE: Always rinse after using disinfection or cleaning products with fresh water and dry immediately as residue build-up may damage fabrics. To remove residue build-up, follow the Regular Cleaning and Maintenance procedure above.

Do not use alcohol-based products, detergents, leather or PVC (vinyl) preservatives or conditioners, or abrasive cleaners as they will dramatically harm the lifespan of the PVC fabric. The plasticisers in the PVC will prematurely dry out and the surface will harden, blister and split.


Many cleaners and disinfectants including brands of household bleach include ingredients that are known to harm upholstery fabrics. Do not under any circumstances use products that include: eucalyptus oil, citrus acid, citrus peel, orange peel, limonene, tea tree oil or any chemical or natural-based solvents. Always select bleach with sodium hypochlorite as the only active ingredient.

For more detailed information on how to disinfect your upholstery fabric, visit the link below:  
[www.athlegen.com.au/athlegen\\_blog/covid-19-treatment-table-disinfection-guide](http://www.athlegen.com.au/athlegen_blog/covid-19-treatment-table-disinfection-guide)

NOTE: All colours shown are approximate. While we do our best to represent fabric colours accurately; digital representations may vary depending on the viewing device.



SNOW

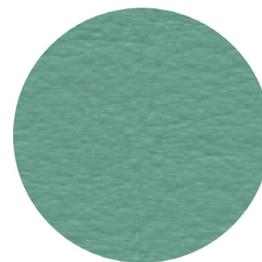

OPAL



NAVY